

Quantum Flex™ Markers

www.QuantumMarkers.com • Coeur d' Alene, ID • 866-778-6017

D-375 Post Driver

When installing Quantum Flex™ Markers, it is recommended that you use a Quantum Flex™ D-375 post driver. The driver is easy to use and greatly reduces the installation time. The D-375 post driver will fit both the QM-375 and the QM-250 marker profile. No need to carry 2 separate installation tools if working with both marker styles. The D-375 post driver holds the marker rigid during the installation process, preventing the marker from flexing. This concentrates the driving energy through the marker into the soil thereby allowing the marker to be driven into very hard soil conditions.

Quantum Drivers are made in the USA and are constructed of welded steel with a bright, high visible orange powder coat finish for durability. The driver weighs 25 pounds, is 45 inches in length and has easy grip handles for ease of handling.


Driver Dimensions:

Outside Dimensions:

Length: 44 inches
Total Width: 10 inches
Handle Length: 20 inches

Inside Sleeve Dimensions:

4 1/16" X 5/8"

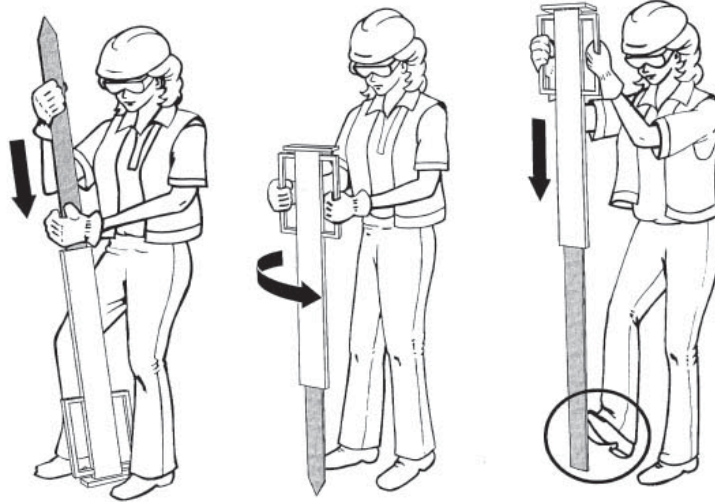

ALWAYS WEAR PROPER SAFETY EQUIPMENT INCLUDING PROTECTIVE EYEWEAR, GLOVES, BOOTS AND SAFETY VEST

Step 1: Remove marker from packaging and insert into driver with pointed end exposed.

Step 2: Turn driver and marker to vertical and plumb position. Installer should always be facing on coming traffic.

Step 3: Drive marker into the ground with light taps. Bracing your foot against the post may help stabilize the marker.

